


415 FENCE TOOL
INSTRUCTION SHEET

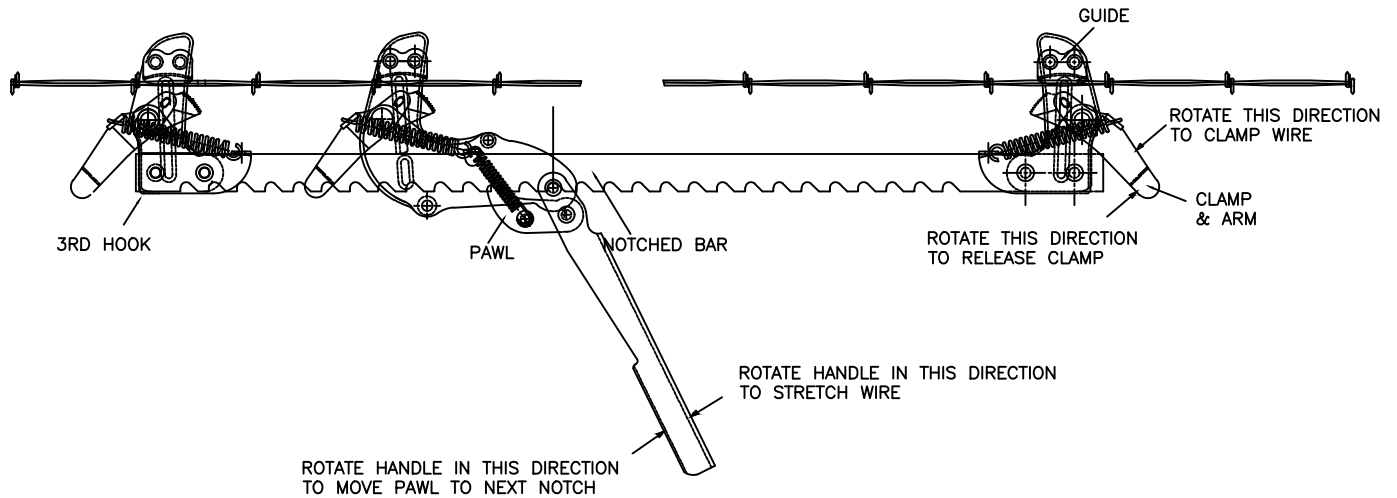

1. PLACE WIRE BETWEEN GUIDE AND CLAMP. ROTATE CLAMP AND ARM AS SHOWN TO CLAMP WIRE. LEAVE 3RD HOOK CLAMP AND ARM OPEN AT THIS TIME.
2. ROTATE HANDLE AS FAR AS POSSIBLE IN DIRECTION SHOWN TO STRETCH WIRE. ROTATE HANDLE IN OPPOSITE DIRECTION UNTIL PAWL DROPS BACK INTO NOTCHED BAR. REPEAT TO GET DESIRED TENSION OR SEE STEP 5.
3. AFTER WIRE ENDS HAVE BEEN JOINED TOGETHER SECURELY, RELEASE PRESSURE ON THE WIRE BY ROTATING THE HANDLE PARALLEL TO THE NOTCHED BAR. THE TRAVELING HOOK CAN BE EXTENDED THE FULL LENGTH OF THE STRETCHER WITH THE HANDLE IN THIS POSITION.
4. TO RELEASE THE CLAMP FROM THE WIRE ROTATE THE CLAMP AND ARM IN THE DIRECTION SHOWN. BE SURE THAT THE PRESSURE ON THE WIRE HAS BEEN RELEASED BEFORE DOING THIS. IT MAY BE NECESSARY TO TAP ARM WITH A HAMMER TO RELEASE CLAMP.
5. IF MORE TENSION IN WIRE IS REQUIRED, SECURE WIRE BETWEEN 3RD HOOK CLAMP AND GUIDE BY ROTATING CLAMP AND ARM AS SHOWN. RELEASE CLAMP ON TRAVELING HOOK. EXTEND POSITION OF TRAVELING HOOK, TIGHTEN CLAMP ON TRAVELING HOOK, RELEASE CLAMP ON 3RD HOOK, AND REPEAT STEP 2.
6. ONE END OF THE STRETCHER MAY BE HOOKED AROUND A POST TO STRETCH THE WIRE TO THE POST.